



***reximex***



# **RP - RPA**

**PCP AIR PISTOL OWNERS MANUAL**

.177 Cal. - .22 Cal.

**READ ALL INSTRUCTIONS AND WARNINGS  
IN THIS MANUAL BEFORE USING THIS AIRGUN**

# INDEX



<u>Page</u>	<u>Content</u>
1	Warranty
1	Warning
2	Safety Review
3	General Instructions & Operating Safety
3	Manual Safety
4	Operating Instructions
4	A. Filing The Air Cylinder
5	B. Loading The Airgun
7	C. Un-Loading & Un-Cocking The Airgun
8	D. Jammed Ammo
8	E. Trigger Adjustment
9	F. Detachable Stock
9	G. Regulator Settings
10	H. Maintenance
10	Replacement Of O-Rings
11	I. Storage
12	Mechanism Parts & Part Numbers

## 1. WARRANTY

All REXIMEX PCP Airguns carry a One Year Warranty against faulty workmanship and defective materials. Contact the dealer from which you purchased the airgun if it becomes necessary. If the airgun develops a defect within the warranty period, contact the dealer from whom it was purchased. The guarantee does not cover any damage caused by tampering with the airgun.

This airgun should only be disassembled by factory-authorized repairmen.

## 2. WARNING!

**WARNING!** NOT A TOY. THIS AIRGUN IS RECOMMENDED FOR ADULT USE ONLY. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 800 YARDS (732 METERS).

**WARNING!** DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC. IT MAY CONFUSE PEOPLE AND MAY BE A CRIME.

DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. POLICE AND OTHERS MAY THINK IT IS A FIREARM AND IT MAY BE A CRIME.

YOU AND OTHERS NEXT TO YOU SHOULD ALWAYS WEAR SHOOTING GLASSES TO PROTECT YOUR EYES.

BUYERS AND USERS HAVE TO OBEY THE LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIRGUN

**WARNING!** NEVER ATTEMPT TO DISASSEMBLE THIS AIRGUN WHILE IT IS CHARGED!

FAILURE TO OBEY THIS INSTRUCTION COULD RESULT IN PERSONAL INJURY OR DAMAGE TO THE AIRGUN!

### 3 SAFETY REVIEW

- Never use the airgun if you are intoxicated or under the influence of drugs.
- Even if there is no pressure sign on the manometer, never disassemble the pressurized tube!
- Never fire the airgun when it is empty of air or when the air cylinder is removed!
- Never point the airgun at anyone, or allow anyone to point a airgun at you!
- Treat every airgun as if it is loaded even if you know it is not loaded!
- Always carry the airgun so that the direction of the muzzle is under control, even if you stumble.
- Always be sure of your target and what lies behind it before firing your airgun.
- Never leave a loaded airgun unattended.
- Beware of targets that tend to cause ricochets.
- It is recommended that eye protection is worn when charging the air cylinder.
- Always use caution when operating this airgun.
- Only use dry cloth to clean any dirt inside the barrel for various reasons (humidity, dust, etc.)
- In your airgun, only use synthetic or mineral base high viscosity oil in order not to create filling effect with lower tolerance parts.
- Learn and obey the laws in your location.
- Be responsible in your use of this weapon!

REXIMEX PCP airguns are designed specifically for use with DRY COMPRESSED AIR. NO OTHER GAS OR GAS COMBINATION CAN BE USED.

The Airgun may be filled by a Diving Scuba Tank or a suitable compressor  
MAXIMUM SAFE WORKING PRESSURE (SWP): 250 BAR



#### DANGER OF EXPLOSION!


THE AIR TANK POSES THE EXPLOSION RISK IF IT GETS HEATED SUBJECT TO SUNTRAY FOR EXTENDED PERIOD OF TIME.

(Max. + 40° / Min. -05°)

OTHERWISE, THE AIRGUN SHOULD BE LEFT TO COOL DOWN IN A COOL ENVIRONMENT  
RECOMMENDED TO BE TRANSPORTED UNDER MAXIMUM 80 BARS PRESSURE DURING FLIGHTS.

## 4 GENERAL INSTRUCTIONS & OPERATING SAFETY

- RP & RPA Airguns may be fitted with a scope or alternate optic sights before use.
- Before using your airgun, read and abide by the basic safety rules.

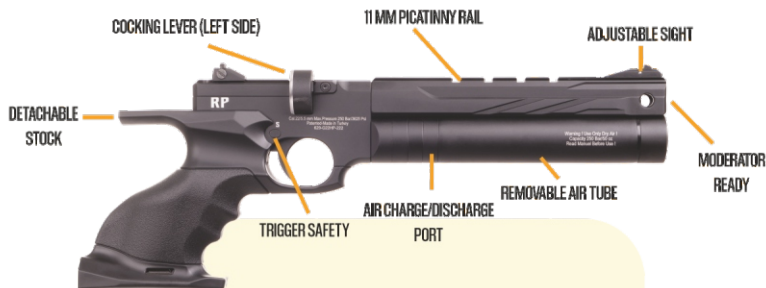

### MANUAL SAFETY

**CAUTION:** Like all mechanical devices, airgun safety can fail. Even when the safety is on "SAFE" you should continue to handle the airgun in a safe manner.

Locate the safety switch of the airgun directly above the trigger guard. Safety switch can be set to "S" (SAFE) and "F" (FIRE) positions manually.

The letters "S" (SAFE) and "F" (FIRE) are located below the safety switch.

#### A- Airgun on "S" (SAFE) Position

To set the safety on, push the safety switch from the left side of the airgun. In this position the trigger cannot be pulled and the airgun cannot be fired.

#### B- Airgun on "F" (FIRE) Position

To set the safety off, push the safety switch from the right side of the airgun. In this position the trigger can be pulled and the airgun can be fired.



**WARNING!** KEEP THE AIRGUN IN THE "SAFE" POSITION UNTIL YOU ARE READY TO SHOOT. WHEN READY PUSH THE SAFETY SWITCH TO "FIRE" POSITION

## 5. OPERATING INSTRUCTIONS

### A. FILLING THE AIR CYLINDER

#### Warning!

1. Before filling the air cylinder; make sure the airgun is on "S" (SAFE) position, no pellets are loaded in the air airgun and/or barrel and magazine is not mounted in the gun.

**NOTE:** If the air cylinder pressure is at "0" Bar, then it will be necessary to cock the airgun to remove the force of the Hammer against the firing Valve. Otherwise, the air will pass through the firing Valve out the barrel, and the air cylinder will not pressurize.

2. Take all safety measures before filling the air cylinder. It is compulsory for the user and to wear eye & ear protection when filling the air cylinder.

3. While filling in the air cylinder; the pressure in the air cylinder must be monitored from the air gauge of the hand pump or scuba charging kit, Do not look at the air gauge on the air cylinder during filling process. Instead, reference the gauge on your fill device.

Assemble the filling equipment hose with the filling probe that is provided inside the box. Pull back on the outer sleeve on the quick connect fitting to release it from your airgun, when your tube is filled. If you hear SOUND of air during the first filling, move the probe and enable the O rings to be air-proof. (if the leakage continues, O rings might be deformed)

If the Air-Pressure on your airgun is below 30 bar, there might be air leakage preventing to continue shooting. This is not a problem; you may re-fill the air cylinder and continue shooting.

## B. LOADING THE AIRGUN

**CAUTION:** Never re-use ammunition.

Review the entire manual, including the section on Safety, before firing your airgun.

**CAUTION:** Know your airgun's loading mechanism for safest use! Pellets can either be loaded one by one using a single shot tray, or multiple pellets may be loaded using the rotary magazine. With the magazine placed correctly, EVERY action of closing the side lever WILL place a pellet into the chamber.

**DO NOT TRY TO CLOSE THE SIDE LEVER WHEN THE MAGAZINE IS NOT LOADED!!!**

Do not re-cock the airgun while there is pellet loaded inside the chamber!! This will load multiple pellets at the same time and may damage your airgun.

Removal of the magazine WILL still leave the chambered pellet in place unless the airgun is fired.

### Loading the Magazine

Make sure your airgun is on "SAFE" position and is pointed to a SAFE DIRECTION.


If the magazine is fitted on the airgun, remove it to begin loading or unloading.

Move the clear cover over the catch point and rotate in the direction of the arrows (clockwise) Fig. A.

Place a finger under the magazine covering the hole, place the first pellet in the magazine nose first, make sure that the pellet does not protrude out of the magazine. If the pellet does protrude, simply push the pellet inward. Fig. B

Rotate the cover counterclockwise and place the remaining pellets into the magazine. Upon completion rotate the cover until it comes to rest. Fig. C

If it looks like Fig. D. The magazine is now ready for use.

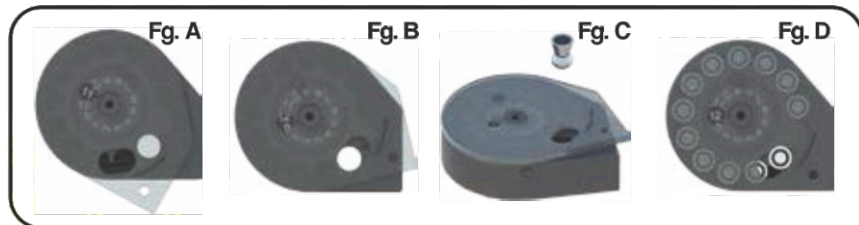

## Placing the loaded Magazine on the Airgun & Firing Safety

**NOTE:** Following these directions will load your airgun and it will be ready to FIRE.

Make sure your airgun is on "SAFE" position and is pointed to a SAFE DIRECTION.

- To fit the magazine into the airgun, pull the cocking handle backwards until it stops.
- With the cover of the magazine facing the butt of the airgun, insert the magazine from the right side and push it inward until it snaps into place.
- The line on the back of the magazine should align with the line on the loading slot of the airgun.

### **YOU WILL DAMAGE THE MAGAZINE IF IT IS NOT PLACED CORRECTLY**

- Pull the cocking handle to its rear-most position.
- Push the cocking handle forward fully and ensure that it lays flat against the airgun in order to chamber a pellet.
- After following these steps and reading the entire manual, including the section of safety procedures, your airgun is now loaded and ready to fire.

### **DO NOT CLOSE THE COCKING HANDLE / MAGAZINE RELEASE BOLT UNTIL YOU ARE READY TO FIRE.**

- Aim at your intended target and disengage the safety and prepare to shoot.
- Pull the trigger gently and the airgun will fire.
- To reload the airgun, pull the cocking handle to its rear-most position. This will index the magazine and align the next pellet with the barrel. Then, repeat previous steps.





## C. UN-LOADING & UN-COCKING THE AIRGUN

### Un-loading & Removing the Magazine

1. Pulling the cocking handle to its rear-most position and Pushing it forward fully while the magazine is loaded will result in chambering a pellet.
2. To unload the airgun, it is recommended to fire the pellet in a **SAFE DIRECTION**.
3. Pull the side lever back to the rear position.

**CAUTION.** This action **WILL** cock the airgun.

4. Push the magazine out of the receiver from the left side.
5. Un-cock the airgun for safe storage.

### Un-Cocking

When you are finished shooting, remove the magazine as instructed and un-cock the airgun by following the steps below:

1. Point the airgun in a **SAFE DIRECTION**.
2. Take the airgun on "FIRE" position.
3. Pull the cocking handle back to its rear-most position.
4. While firmly holding the cocking handle in the rear position, pull the trigger.
5. Continue to hold the trigger back while sliding the side lever forward to the latched position.
6. Release the trigger.
7. Put the airgun on "SAFE" position.

**WARNING!** EVEN THOUGH YOU FOLLOW THE UNLOADING PROCEDURE, CONTINUE TO TREAT THE AIRGUN AS IT IS LOADED. NEVER POINT THE AIRGUN AT ANYTHING YOU DO NOT INTEND TO SHOOT.

## D. JAMMED AMMO

A jammed ammo is usually caused by firing the airgun when the air pressure is too low.

Please, do not operate your airgun below 100 bar (1500 PSI) air pressure.

**CAUTION:** Never try to look through the barrel to see if a jammed ammo is cleared.

Make sure the airgun is on "SAFE" position and pointed in a SAFE DIRECTION.

- Pull the cocking handle back to its rear-most position.
- Insert a clearing rod of the proper size into the barrel, starting from the muzzle (Barrel may be damaged if the clearing rod is not proper size)

**NOTE:** Cocking handle must be at its rear-most position for the jammed ammo to clear the breech when it is pushed out by the ramrod.

- Push or tap ammo towards the breech end of the barrel until the pellet is extracted from the chamber.
- Operate carefully in order not to damage the chamber sealing O-ring.
- Remove and discard the ammo.
- Do not reuse that ammo.

If you are not successful removing the jammed ammo following above instructions, take no further action. REXIMEX Technical Service or an Authorized Service Station will unjam your airgun (Free of charge during the warranty period).

## F. TRIGGER ADJUSTMENT

- Trigger sensitivity adjustment may be done using an Allen wrench from next to the trigger, as shown on the picture



## F. DETACHABLE STOCK

- Attach and Detach easily as shown on the figure.



**WARNING!** DO NOT MODIFY OR ALTER YOUR AIRGUN. ATTEMPTS TO MODIFY THE AIRGUN IN ANY WAY INCONSISTENT WITH THIS MANUAL MAY MAKE YOUR AIRGUN UNSAFE TO USE, CAUSE SERIOUS INJURY OR DEATH, AND WILL MAKE THE WARRANTY INACTIVE.

**WARNING!** DO NOT ATTEMPT TO REPAIR YOUR AIRGUN OR TO DISASSEMBLE TO CORRECT AN OVER-FILL OR VALVE LOCK. PARTS MAY FLY OUT FROM THE AIRGUN AT DANGEROUS SPEEDS IF IT IS DISASSEMBLED WHILE PRESSURIZED.

## G. REGULATOR SETTINGS

- Remove the air tube at the bottom.

**ATTENTION!** There may be air leakage when removing the tube. Remove as quickly as possible to lower the leakage.

- To release the air in the regulator, pull the cocking lever and press the trigger. (Continue this process until the air in the regulator is completely released.)

**ATTENTION!** Do not adjust the regulator before completely releasing the air in the regulator. If you do, O rings may be damaged



## H. MAINTENANCE

- Apply Reximex silicone chamber oil on the barrel breech and O-rings every 3 months or 500 shots.
- Periodically check your airgun. If anything feels different, like a shorter or weaker trigger pull, this may mean worn out or broken parts, call Reximex customer service for assistance before re-using your airgun.

## REPLACEMENT OF O-RINGS

After a period of time, the O-rings on the fill probe will need to be replaced. The need for this will become noticeable if air is heard leaking from the nozzle while charging the airgun.

## LUBRICANT

General: Keep the airgun clean and wipe it off with regular gun oil and a cloth occasionally.

Fill probe: Apply a thin layer of suitable mineral based oil occasionally or when dried out.

Magazines: Apply a thin layer of suitable mineral based oil occasionally or when dried out.

Cocking handle and Sidelever Sliding Surface: Apply a thin layer of a standard multipurpose grease occasionally or when dried out.


**WARNING:** Never use grease or spray oil in the moving parts inside the gun. This can result in unstable power and also leakage. Be moderate with lubricant.

## I. STORAGE


Store in a place that is dry and dark. Store with air pressure between 50200 bar in the airgun.

### **WARNING!**

- Keep away from spaces with high humidity as steel parts might corrode.
- Keep away from bright sunlight as this shortens the life of the O-rings.
- Never store the airgun loaded with pellets.

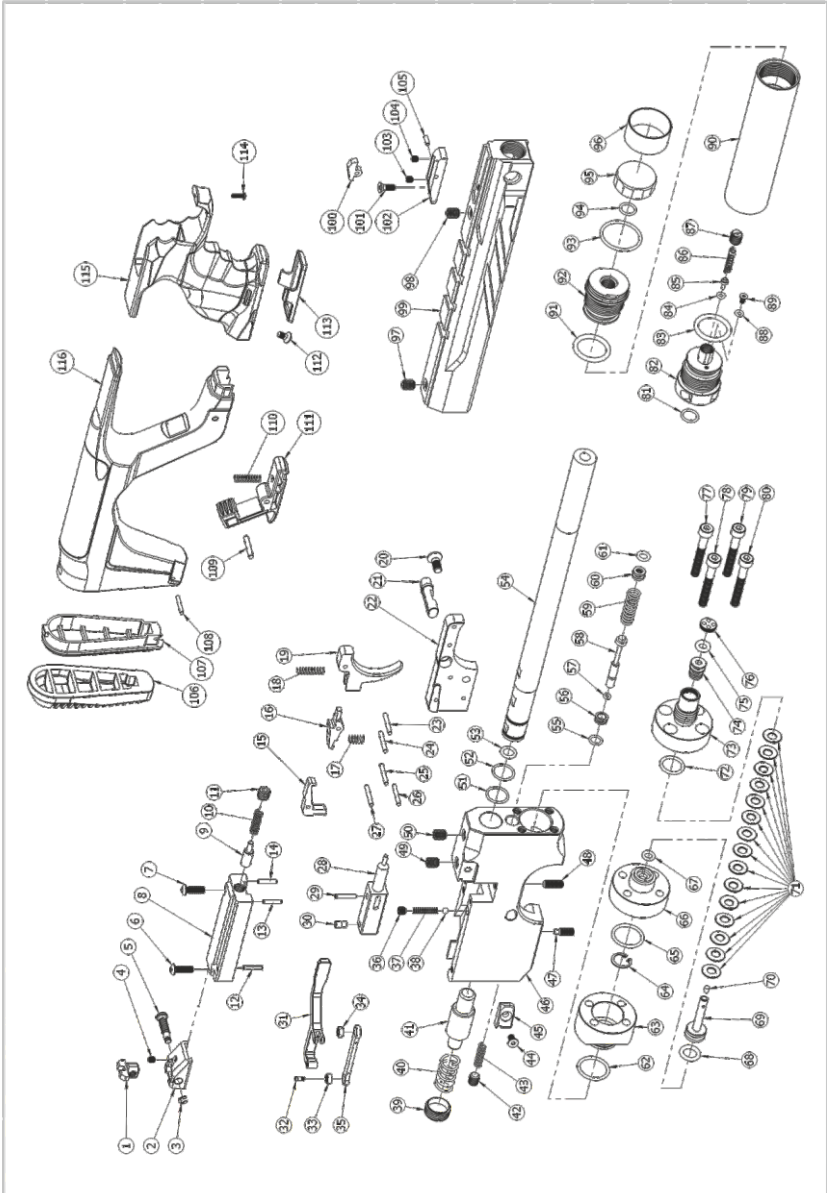**RP SYNTHETIC PARTS & NUMBERS**


**RP WOODSTOCK PARTS & NUMBERS**

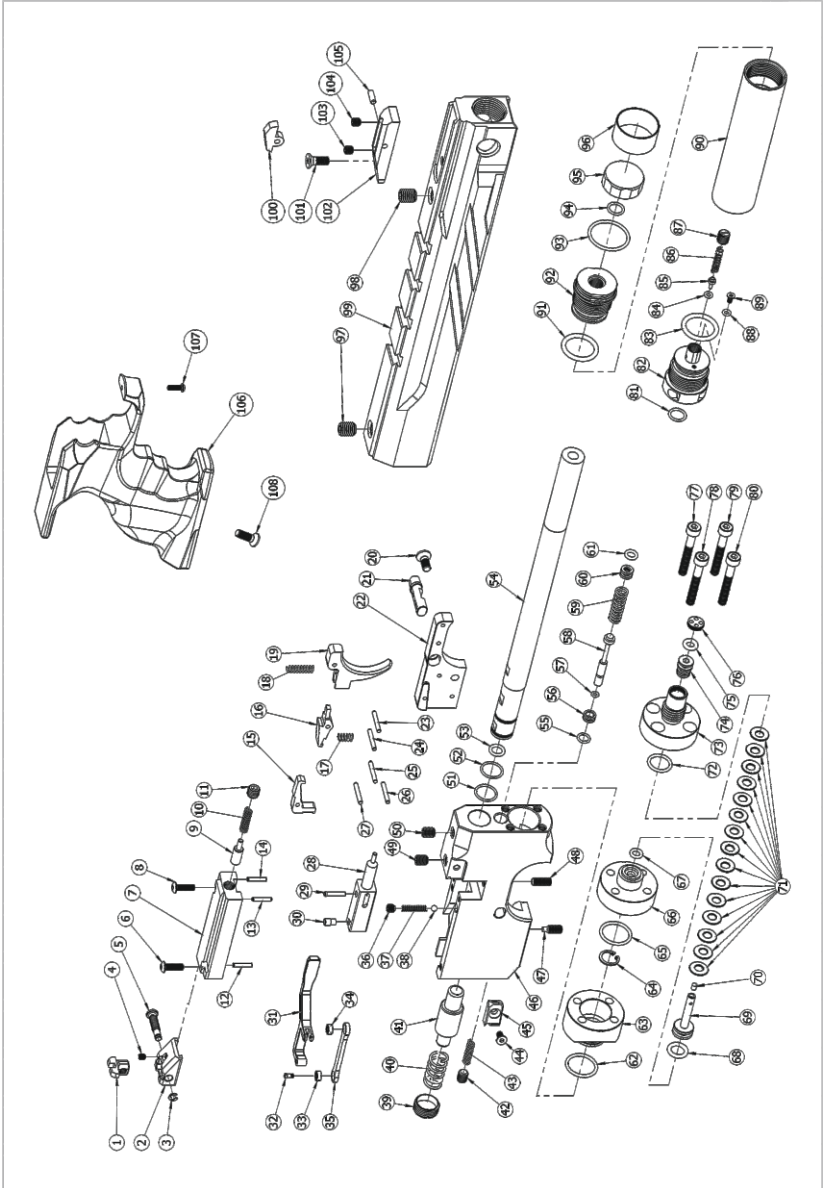

**PART LIST**
**REXIMEX / RP - RPA**

Balok / Part	Parça Kodu / Part Code /	Parça Adı / Part Name	Balok / Part Code /	Parça Adı / Part Name	
					Group
1	RP-3-1-10	Ayarlı Sağ Leğ Parça	7	RP-3-1-6	Adjustable Rear Sight
2	RP-3-1-6	Ayarlı Sol Göçme	7	RP-3-1-6	Adjustable Rear Sight Housing
3	DIN 9729	D1 x 7 Inşut Bolu Valfi	8	DIN 6220	OHM 6220
4	ISO 4026	M3 x 3 - Diş. Uçlu Set screws	4	ISO 4026	M3 x 3 - Flat Head Set screws
5	RP-3-1-50	Barut Basıç Valfi	5	RP-3-1-50	Rear Sight Adjustment Screw
6	ISO 7380	M3 x 10 - Mandar. Başlı Çıçak	6	ISO 7380	M3 x 10 - Socket Button Head Screw
7	ISO 7380	M3 x 10 - Mandar. Başlı Çıçak	7	ISO 7380	M3 x 10 - Socket Button Head Screw
8	RP-3-1-10	Ölçü Kaşık	8	RP-3-1-10	Trim Cover
9	RP-3-1-10	Kuruna Kökü Kuruna Pimi	10	RP-3-1-15	Counter Pin
10	RP-3-1-14	Kuruna Kökü Kuruna Pimi	10	RP-3-1-14	Counter Pin
11	ISO 4029	M6 x 6 - Çıçak Uçlu Set screws	11	ISO 4029	M6 x 6 - Cap Valve Set screws
12	ISO 8724	2 x 10 - Diş. Pim	12	ISO 8724	2 x 10 - Parallel Pin
13	ISO 8724	2 x 10 - Diş. Pim	13	ISO 8724	2 x 10 - Parallel Pin
14	ISO 8724	2 x 10 - Diş. Pim	14	ISO 8724	2 x 10 - Parallel Pin
15	RP-3-1-41	Çelik Tutucu	15	RP-3-1-41	Hammer Holder
16	RP-3-1-39	Çelik Tırmık Düğümüne	16	RP-3-1-39	Hammer Holders Start
17	RP-3-1-39	Çelik Tırmık Düğümüne	17	RP-3-1-39	Hammer Holder Spring
18	RP-3-1-35	Tetik Parmaklık Valfi	18	RP-3-1-35	Trigger Finger Piece
19	RP-3-1-34	Tetik Parmaklık	19	RP-3-1-34	Trigger Finger Piece
20	ISO 10662	M4 x 10 - Hıyraz Başlı Çıçak	20	ISO 10662	M4 x 10 - Socket Countersunk Head Screw
21	RP-3-1-33	Ermeyici Butoncu	21	RP-3-1-33	Safety Button
22	RP-3-1-33	Van Kaşık	22	RP-3-1-33	Side Cover
23	ISO 8724	2 x 14 - Diş. Pim	23	ISO 8724	2 x 14 - Parallel Pin
24	ISO 8724	2 x 14 - Diş. Pim	24	ISO 8724	2 x 14 - Parallel Pin
25	ISO 8724	2 x 14 - Diş. Pim	25	ISO 8724	2 x 14 - Parallel Pin
26	ISO 8724	2 x 14 - Diş. Pim	26	ISO 8724	2 x 14 - Parallel Pin
27	ISO 8724	2 x 14 - Diş. Pim	27	ISO 8724	2 x 14 - Parallel Pin
28	RP-3-1-26	4.5mm Pellet İske (Göv)	28	RP-3-1-26	4.5mm Pellet Pusher
29	RP-3-1-24	Kuruna Kökü Levazolu Çık. Pim	29	RP-3-1-24	Cocking Lever Link Zerk Pin
30	RP-3-1-25	Pellet İske (Çift Pim (Wedge))	30	RP-3-1-25	Pellet Pusher Upper Pin (Wedge)
31	RP-3-1-20	Burme Çıçak	31	RP-3-1-20	Cocking Lever
32	RP-3-1-19	Kuruna Kökü Levazolu Çık. Pim	32	RP-3-1-19	Cocking Lever Link Zerk Pin
33	RP-3-1-18	Pellet İske (Tek Pim (Wedge))	33	RP-3-1-18	Cocking Lever Link Zerk Pin
34	RP-3-1-18	Pellet İske (Tek Pim (Wedge))	34	RP-3-1-18	Cocking Lever Link Zerk Pin
35	RP-3-1-23	Kuruna Kökü Levazolu Çık. Pim	35	RP-3-1-23	Cocking Lever Link Zerk Pin
36	ISO 4029	M4 x 4 - Çıçak Çıçak Set screws	36	ISO 4029	M4 x 4 - Cap Valve Set screws
37	RP-3-1-28	Ermeyici Sustası Valfi	37	RP-3-1-28	Safety Catch Spring
38	RP-3-1-45	Hammer Spring	38	RP-3-1-45	Safety Catch Spring
39	RP-3-1-45	Hammer Spring	39	RP-3-1-45	Safety Catch Spring
40	RP-3-1-45	Hammer Spring	40	RP-3-1-45	Safety Catch Spring
41	RP-3-1-45	Hammer Spring	41	RP-3-1-45	Safety Catch Spring
42	ISO 4026	M5 x 6 - Diş. Uçlu Set screws	42	ISO 4026	M5 x 6 - Flat Head Set screws
43	RP-3-1-46	Hammer Spring	43	RP-3-1-46	Safety Catch Spring
44	ISO 4062	M3 x 6 - Diş. Uçlu Set screws	44	ISO 4062	M3 x 6 - Flat Head Set screws
45	ISO 4062	M3 x 6 - Diş. Uçlu Set screws	45	ISO 4062	M3 x 6 - Flat Head Set screws
46	ISO 10662	M3 x 6 - Hıyraz Başlı Çıçak	46	ISO 10662	M3 x 6 - Socket Countersunk Head Screw
47	RP-3-1-47	Sargıç Van Düğümüne	47	RP-3-1-47	Hammer Valve
48	RP-3-1-47	Sargıç Van Düğümüne	48	RP-3-1-47	Hammer Valve
49	ISO 4026	M5 x 10 - Silindirik Uçlu Set screws	49	ISO 4026	M5 x 10 - Dog Bolt Set screws
50	ISO 4766	M4 x 10 - Çıçaklı Uçlu Set screws	50	ISO 4766	M4 x 10 - Grooved Ball Head Set screws
51	ISO 4026	M5 x 6 - Diş. Uçlu Set screws	51	ISO 4026	M5 x 6 - Flat Head Set screws
52	O-Ring	10 x 1	52	O-Ring	10 x 1
53	O-Ring	10 x 1	53	O-Ring	10 x 1
54	RP-3-1-1	Namırlı 50 mm	54	RP-3-1-1	Barrel 50mm
55	O-Ring	5.50 x 1.55	55	O-Ring	5.50 x 1.55
56	RP-3-1-48	Hammer Van Döğümüne	56	RP-3-1-48	Hammer Valve
57	O-Ring	2 x 3 (NBR-90)	57	O-Ring	2 x 3 (NBR-90)
58	RP-3-1-47	Çelik Valfi	58	RP-3-1-47	Hammer Valve
59	RP-3-1-49	Çelik Valfi Valfi	59	RP-3-1-49	Hammer Valve
60	RP-3-1-50	Çelik Valfi Valfi Düğümüne	60	RP-3-1-50	Hammer Valve
61	O-Ring	4 x 1.50 (NBR-90)	61	O-Ring	4 x 1.50 (NBR-90)
62	RP-3-1-50	Çelik Valfi Valfi Düğümüne	62	RP-3-1-50	Hammer Valve
63	RP-3-1-65	Regülatör Balakası Üstü	63	RP-3-1-65	Regulator
64	DIN 472	11 x 1 - İç Süpürge	64	DIN 472	Regulator
65	O-Ring	14 x 1.50	65	O-Ring	14 x 1.50
66	RP-3-1-62	Regülatör Parça-1 (Arka Parça)	66	RP-3-1-62	Regulator Part-1 (Rear Piece)
67	O-Ring	4 x 1.50 (NBR-90)	67	O-Ring	4 x 1.50 (NBR-90)
68	O-Ring	7 x 2 (NBR-90)	68	O-Ring	7 x 2 (NBR-90)
69	RP-3-1-60	Regülatör Valfi	69	RP-3-1-60	Regulator Valve
70	RP-3-1-60	Regülatör Valfi	70	RP-3-1-60	Regulator Valve
71	RP-3-1-58	Regülatör Valfi Valfi (Üst Valfi)	71	RP-3-1-58	Regulator Valve Spring (Upper Valve)
72	O-Ring	10 x 1.50 (NBR-90)	72	O-Ring	10 x 1.50 (NBR-90)
73	RP-3-1-55	Regülatör Parça-2 (Ön Parça)	73	RP-3-1-55	Regulator Part-2 (Front Piece)
74	RP-3-1-53	Regülatör Arka Valfi	74	RP-3-1-53	Regulator Adjustment Screw
75	O-Ring	4 x 2 (NBR-90)	75	O-Ring	4 x 2 (NBR-90)
76	RP-3-1-52	Tüp Valfi Ayarlanabilir Düğümüne	76	RP-3-1-52	Air Tube Valve Adjustable Base
77	ISO 4762	M3 x 10 - İmboş Çıçak	77	ISO 4762	M3 x 10 - Socket Head Screw
78	ISO 4762	M4 x 30 - İmboş Çıçak	78	ISO 4762	M4 x 30 - Socket Head Screw
79	ISO 4762	M4 x 30 - İmboş Çıçak	79	ISO 4762	M4 x 30 - Socket Head Screw
80	ISO 4762	M4 x 30 - İmboş Çıçak	80	ISO 4762	M4 x 30 - Socket Head Screw
81	O-Ring	9 x 5 x 1.50	81	O-Ring	9 x 5 x 1.50
82	RP-3-1-2	Arka Tüp Başlığı	82	RP-3-1-2	Air Tube Rear Cap
83	O-Ring	20 x 3 (NBR-90)	83	O-Ring	20 x 3 (NBR-90)
84	O-Ring	3 x 3.00 (NBR-90)	84	O-Ring	3 x 3.00 (NBR-90)
85	RP-3-1-5	Van Valfi	85	RP-3-1-5	Air Valve Valve
86	RP-3-1-4	Tüp Valfi Valfi	86	RP-3-1-4	Air Tube Valve
87	RP-3-1-4	Tüp Valfi Valfi Düğümüne	87	RP-3-1-4	Air Tube Valve Spring Base
88	RP-3-1-5	3.50 x 1.50	88	RP-3-1-5	Air Tube Valve Spring Base
89	ISO 10662	M3 x 6 - Hıyraz Başlı Çıçak	89	ISO 10662	M3 x 6 - Socket Countersunk Head Screw
90	RP-3-1-3	Alüminyum Ön Kapaç	90	RP-3-1-3	Aluminum Front Cap
91	O-Ring	20 x 3 (NBR-90)	91	O-Ring	20 x 3 (NBR-90)
92	RP-3-1-3	Çm Tüp Başlığı	92	RP-3-1-3	Air Tube Front Pin
93	O-Ring	20 x 3.00	93	O-Ring	20 x 3.00
94	O-Ring	9 x 1.50	94	O-Ring	9 x 1.50
95	RP-3-1-13	Tüp Basınç Göstergesi	95	RP-3-1-13	Tube Pressure Gauge
96	RP-3-1-13	Tüp Basınç Göstergesi	96	RP-3-1-13	Tube Pressure Gauge
97	ISO 4026	M5 x 6 - Diş. Uçlu Set screws	97	ISO 4026	M5 x 6 - Flat Head Set screws
98	ISO 4026	M5 x 6 - Diş. Uçlu Set screws	98	ISO 4026	M5 x 6 - Flat Head Set screws
99	RP-3-1-1	Barrel	99	RP-3-1-1	Barrel
100	RP-3-1-6	Barrel	100	RP-3-1-6	Barrel
101	ISO 10662	M3 x 6 - Hıyraz Başlı Çıçak	101	ISO 10662	M3 x 6 - Socket Countersunk Head Screw
102	ISO 4026	M5 x 6 - Diş. Uçlu Set screws	102	ISO 4026	M5 x 6 - Flat Head Set screws
103	ISO 8724	2 x 6 - Diş. Pim	103	ISO 8724	M3 x 3 - Flat Head Set screws
104	ISO 8724	2 x 6 - Diş. Pim	104	ISO 8724	M3 x 3 - Flat Head Set screws
105	ISO 8724	2 x 6 - Diş. Pim	105	ISO 8724	M3 x 3 - Flat Head Set screws
106	RP-3-1-5	Tahan Lastiği	106	RP-3-1-5	Shock Absorber Bush
107	RP-3-1-5	Tahan Lastiği (Göv)	107	RP-3-1-5	Shock Absorber Bush
108	ISO 8724	3 x 20 - Diş. Pim	108	ISO 8724	3 x 20 - Parallel Pin
109	ISO 8724	3 x 20 - Diş. Pim	109	ISO 8724	3 x 20 - Parallel Pin
110	RP-3-1-3	Dış. Kapaç	110	RP-3-1-3	Shoulder Bolt Adjustments Button
111	RP-3-1-3	Dış. Kapaç	111	RP-3-1-3	Shoulder Bolt Adjustments Button
112	RP-3-1-3	Dış. Kapaç	112	RP-3-1-3	Shoulder Bolt Adjustments Button
113	RP-3-1-3	Dış. Kapaç	113	RP-3-1-3	Shoulder Bolt Adjustments Button
114	ISO 10662	M3 x 10 - Hıyraz Başlı Çıçak	114	ISO 10662	M3 x 10 - Socket Countersunk Head Screw
115	RP-3-1-3	Rafine Ağı Kaşık	115	RP-3-1-3	Synthetic Handrip Lower Cap
116	RP-3-1-3	Rafine Ağı Kaşık	116	RP-3-1-3	Synthetic Handrip Lower Cap
117	RP-3-1-3	Rafine Ağı Kaşık	117	RP-3-1-3	Synthetic Handrip Lower Cap
118	RP-3-1-3	Rafine Ağı Kaşık	118	RP-3-1-3	Synthetic Handrip Lower Cap
119	RP-3-1-3	Rafine Ağı Kaşık	119	RP-3-1-3	Synthetic Handrip Lower Cap
120	RP-3-1-3	Rafine Ağı Kaşık	120	RP-3-1-3	Synthetic Handrip Lower Cap
121	RP-3-1-3	Rafine Ağı Kaşık	121	RP-3-1-3	Synthetic Handrip Lower Cap
122	RP-3-1-3	Rafine Ağı Kaşık	122	RP-3-1-3	Synthetic Handrip Lower Cap
123	RP-3-1-3	Rafine Ağı Kaşık	123	RP-3-1-3	Synthetic Handrip Lower Cap
124	RP-3-1-3	Rafine Ağı Kaşık	124	RP-3-1-3	Synthetic Handrip Lower Cap
125	RP-3-1-3	Rafine Ağı Kaşık	125	RP-3-1-3	Synthetic Handrip Lower Cap
126	RP-3-1-3	Rafine Ağı Kaşık	126	RP-3-1-3	Synthetic Handrip Lower Cap
127	ISO 7380	M3 x 10 Mandar. Başlı Çıçak	127	ISO 7380	M3 x 10 - Socket Button Head Screw
128	ISO 10662	M5 x 16 - Hıyraz Başlı Çıçak	128	ISO 10662	M5 x 16 - Socket Countersunk Head Screw



**NOTES**

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---


---


---



**REXIMEX İt. İh. Av Malz. Sav. San. Tic. Ltd. Şti.**

 Bayaşıar Mahallesi 41958. Sokak No:3 Beyşehir / Konya

 0332 511 0055  [export@reximex.com](mailto:export@reximex.com)

 [www.reximex.com](http://www.reximex.com)

